


Pantera Sway Bar Bolt Replacement

- Step 1, cut 206 old studs
Knock out old
heads w/ punch
- Step 2, Cut bottom
of work, pry
open flap
- Step 3, Get backing
plate 2' X 3.5'
X 3/8" thick
steel, X 2
left + right
side.
- Step 4, drill +
thread
plate for
new studs.
- Step 5, Slide new
backing plate
up inside.

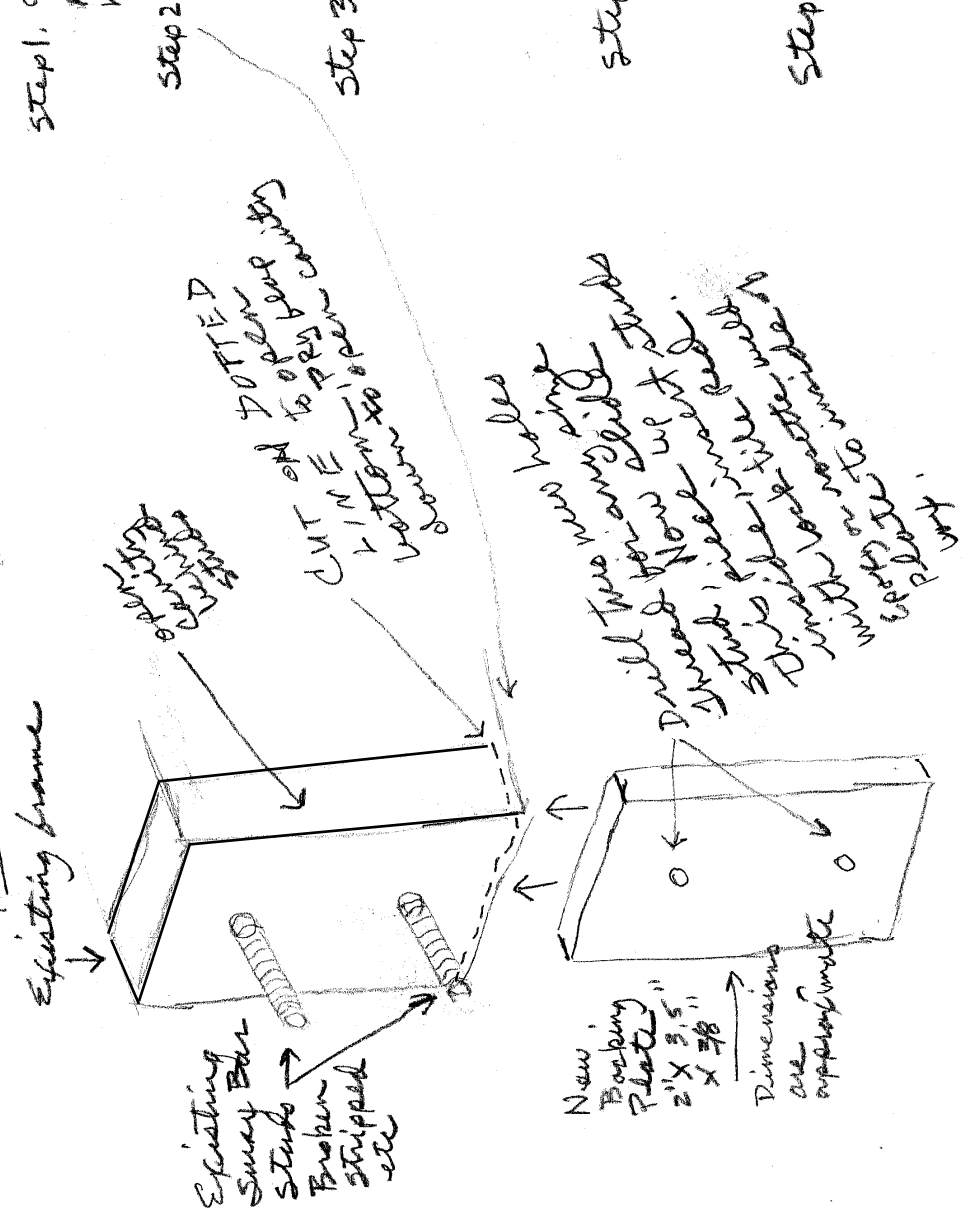

Drill two new holes
Drill two new side
studs
Drill two new side
studs
Drill two new side
studs
Drill two new side
studs
Drill two new side
studs